


CALLISTO G 360 TETHER SHORTENTING CLIP INSTALLATION INSTRUCTIONS




In vehicle installations where the tether anchor location requires the top tether to be shorter than 16" for proper installation, please use the tether clip supplied and follow these instructions when installing.

This tether clip has been tested and approved by Cybex for installation on Callisto G 360 car seat.

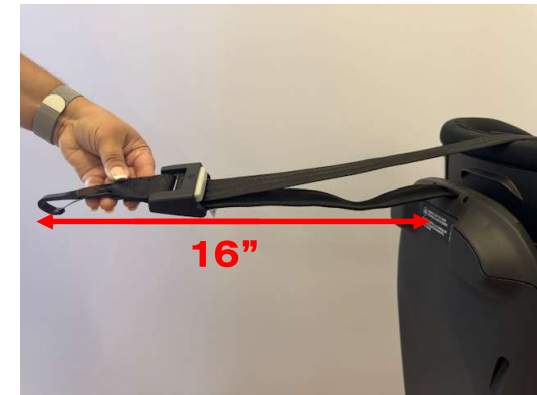

1

First Fold the tether at white tag (~10").

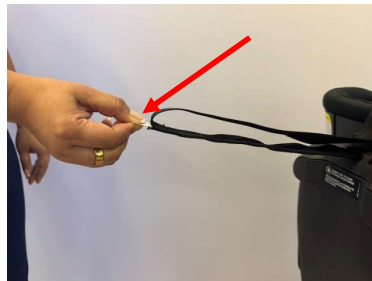

2

Next thread the end of the loop down through the clip from top to bottom in the slot furthest from you.



3

Slide clip all the way to the back of the car seat base holding the end of the loop firmly in one hand.





CALLISTO G 360 TETHER SHORTENING CLIP INSTALLATION INSTRUCTIONS

4

Rotate clip to upright position. Take the end of the loop and thread it up through the open top slot in clip.



6

Take the end of the loop and thread it back down through the bottom slot in the clip, pulling it all the way through.



5

Pull the loop tight.



7

Verify clip and webbing routing match photo. **Note:** Loop location behind base anti-rebound bar.



8

You can now adjust the tether strap to the appropriate length for your vehicle installation.